


INSTALLATION WITH STANDARD HAMMER

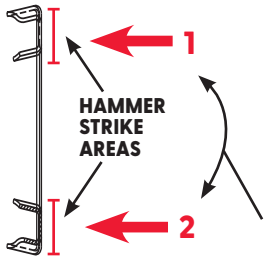

Firmly set one side of the **EZLOG Hog Nose Staple™** onto the log spanning the end split. Drive the staple in using alternating hits on the opposing ends of the product. **Do not strike the center.**

USE CAUTION! Continue “walking” the staple into the log until it is fully seated.



SAFETY FIRST!




SAFETY GLOVES





EYE PROTECTION

NEW! EZLOG PRECISION INSTALL TOOL

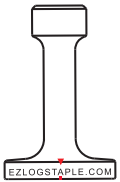

The “game-changer” when it comes to safety and precision installation. The magnetic base holds the staple and allows for more exact placement. Machined from solid high strength steel alloy, it’s designed for years of abuse.

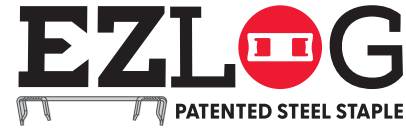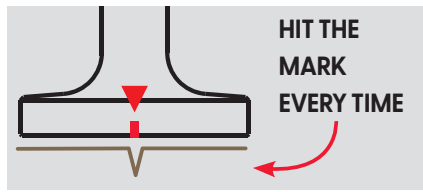

Thank You!

Thank you for purchasing **EZLOG Hog Nose Staples™**. We manufacture these staples to rigorous standards to get the job done. Our unique and patented design holds tight and actually works to fight expansion of end splits on:

LOGS (hard & soft), VENEER LOGS, RAILROAD TIE TIMBERS & MILLED LUMBER.

EZLOG HOG NOSE STAPLE™

INSTRUCTIONS USING EZLOG PRECISION INSTALL TOOL AND STANDARD HAMMER FOR INSTALLATION OF HOG NOSE STAPLE™ INTO LOG END



IMPORTANT



PLEASE READ BEFORE USE



SAFETY FIRST!



SAFETY GLOVES



EYE PROTECTION

Ordering & Info:

Online: EZLOGSTAPLE.COM

Call: (502) 648-2808

Fax: (502) 219-3311



Technical Support:

Call: (270) 963-0844

info@ezlogstaple.com




Designed and Manufactured in the U.S.A.

EZLOGSTAPLE.COM

Using EZLOG PRECISION INSTALL TOOL

INSTALL TOOL

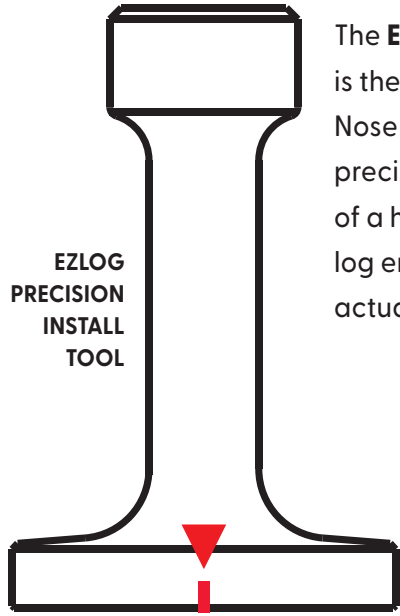

EZLOG PRECISION INSTALL TOOL

The **EZLOG PRECISION INSTALL TOOL™** is the safest and best way to install Hog Nose Staples. The tool also allows for precision placement prior to the first strike of a hammer and drives the staple into the log end more evenly. This helps reduce the actual number of staples used.

INSTALLATION USING A STANDARD HAMMER IS ON BACK

CENTER TARGET MARK MAGNETIC BASE / HOLDS STAPLE



STAPLE WILL NEST INTO POCKET IN TOOL




1 Hold the stenciled side of **EZLOG Hog Nose Staple™** up to the magnetic base of the EZLOG Precision Installation Tool.



2 The staple should seat evenly in the pocket and be held by the high strength magnet.

3 Place the base of the tool firmly and evenly on the log face, spanning the selected split.

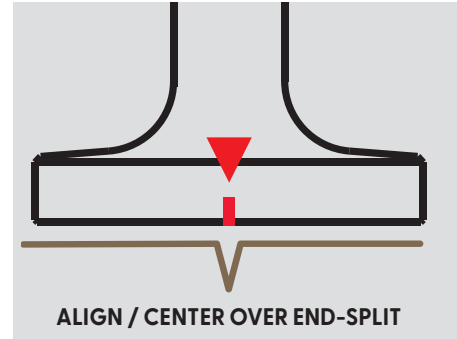

ALIGN / CENTER OVER END-SPLIT

4 To get the maximum benefit from the **Hog Nose Staple Pressure Tabs™** align the red arrow and index mark over the split as a centering guide.



5 Solidly impact the striking point of the tool with a hammer (3- 4 lb. non-slip grip sledgehammer is recommended). Use caution to avoid striking any unprotected portion of the wrist or hand. Leather gloves are recommended for safety.

6 Strike the tool as many times as necessary to drive the base of the installation tool completely to or near the log face (usually two or three hits). Safety goggles are recommended for both user and bystanders.

7 If the **EZLOG Hog Nose Staple™** is not fully seated, simply strike the opposing ends of the staple if desired to complete the install. **Avoid striking the center of the staple** in order to allow easy insertion of the removal tool when necessary.



REMOVAL

Insert pry bar, single claw hammer, cat's paw, screwdriver or similar tool into the center slot of the staple. A rolling pry bar works best. Use the tool to walk or roll the staple from the log.

In some cases, it may be necessary to work the staple partially out from each side and not just from the center. Wear gloves to pull free if needed.